QUICK REFERENCE GUIDE

GB

⚠ Attention

Please read the operating manual prior to operating the machine for the first time.

1 **Programme lights**
2 **Rinse aid level indicator light**
3 **Salt level indicator light**
4 **LED progress indicator lights**
5 **Programme selection button**
6 **Start/Pause button**
7 **Half Load (1/2) button**
8 **Door handle**
9 **On/Off button**

How to use your dishwasher:

Open the water tap.
Plug to the mains.

- Open the door and load the dishwasher. Check if both upper and lower spray arms move freely.
- Fill enough detergent into the detergent dispenser and close the door.
- Use the on / off button to turn the machine on.
- Check the salt and rinse aid level indicator lights. If necessary, refill salt and/or rinse aid.

- Use the programme selection button to choose your washing programme.
  - When there are few dishes, additionally use the Half Load button.

- Start the programme with the Start / Pause button:

⚠ Attention

Avoid opening the door during the washing process. This interrupts the washing process, and hot steam will escape. When the door is closed, the programme will continue.

- Use the on / off button to turn the machine off again.
  When the progress indicator light “programme end” lights up, the programme is complete.

- Close the water tap.
  Pull out the plug.
- Allow your dishes to cool for 15 minutes, with the door open.
  Unload the dishes. Begin with the lower basket.

PROGRAMME TABLE

Programme number	1	2	3 Reference **	4	5
Programme name	Pre-wash	30 Min.	Eco	Bio	Intensive
Cleaning temperature	-	35°C	50°C	60°C	70°C
Suited to	Used dishes which are to be washed at a later time	Dessert and coffee dishes with food leftovers which are not dried on	Normally dirty dishes with starch containing food leftovers which are not dried on	Normally dirty dishes with food leftovers which are not dried on	Especially dirty dishes with food leftovers which are dried on
Degree of dirtiness	-	Few	medium	medium	High
Detergents					
15 cm³	-	x	-	-	-
15-25 cm³	-	-	x	x	x
+ 5 cm³	-	-	x	x	x
Programme process	Pre-wash ▼ End	35°C wash ▼ Cold rinse ▼ Cold rinse ▼ Dry ▼ End	Pre-wash ▼ 50° wash ▼ Clear rinse ▼ Clear rinse ▼ Dry ▼ End	Pre-wash ▼ 60°wash ▼ Clear rinse ▼ Clear rinse ▼ Dry ▼ End	50°C Pre-wash ▼ 70° wash ▼ Cold rinse ▼ Cold rinse ▼ Dry ▼ End
Duration (min)	15	30	170	96	128
Energy (kWh)	-	0,75	1,01	1,00	1,40
Water (l)	3,4	9,6	12	12,4	17,2

The consumption values shown in the table were determined under standard conditions. For this reason, deviations are possible under practical conditions.

** Reference programme für test institutes
The tests in accordance with EN 50242 must be carried out with a full salt container of the water softener, a full reservoir for the rinse aid and the testing programme.
Load capacity : 10

FUNCTION BUTTONS

GB

Function buttons

On/off button
You turn your dishwasher on / off with this button. When turning on, the indicator light for the last used programme will light up.



Start/pause button
You use this button to start the selected programme; the light on the button lights up.
Stop the programme with the start / pause button if you would like to open the door once the dishwasher's washing programme is running.



Half Load (1/2) button
When there are few dishes, you press this button after pressing the programme selection button. When turning the dishwasher on, the indicator light on the button lights up. This function helps you to save water and energy.



Programme selection buttons
Use the programme selection button to select the desired programme. The corresponding programme light lights up.

Programme change
To change a running programme, press the start / pause button: The programme light turns off.
Select a new programme and start it with the start / pause button: The respective programme light lights up.
Note
The new programme begins at the point at which you terminated the former programme.

Cancellation of a programme
To cancel a programme:
Press start/stop button for 5 seconds. The indicator light will start flashing. The machine will drain the water inside the machine for 45 seconds. The programme is cancelled when start/stop indicator light goes off. Then, you can choose and start a new programme.

⚠ **Attention**
- Depending on the length of the terminated programme
- detergent and rinse aid may still be in the dispensers.

Control indicator lights

1 Programme selection

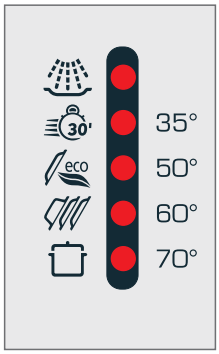

Pre-wash
30 Min.
Economy
Bio
Intensive

2 Rinse aid level indicator light

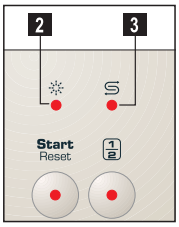

If this indicator light comes on, you have to refill rinse aid.
You can also tell whether rinse aid must be refilled by looking at the rinse aid dispenser. When the visual fill indicator is dark, there is enough rinse aid in the dispenser.
When the colour is light, open the dispenser and refill rinse aid.

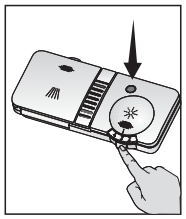

3 Salt level indicator light

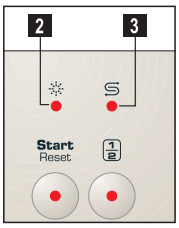

When this indicator light comes on, you must refill special salt.
In machines which do not possess an electrical salt indicator, the salt content can be read on the container for the salt. When the visual fill indicator is dark, there is enough salt in the container.

When the colour is light, open the container and add dishwasher salt.

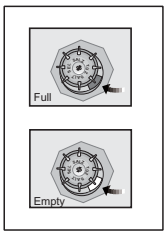

4 LED progress indicator lights

Wash
Rinse
Dry
End

During the washing process, the individual active programme segments are shown by the LED progress indicator lights.

⚠ **Attention**

- In the case of the rapid programme, the progress indicator light for drying does not light up.
- The washing process is only complete when the progress indicator light "programme end" lights up.

Note for Testing Institutes
The necessary information for performance testing will be provided upon request. The request can be done by e-mail through:
dishwasher@standardloading.com

Please do not forget to write the model code and stock code information of the appliance besides your contact information in the e-mail. The model code and stock code information can be found on the rating label, which is placed on the side of the door.